

Alle Rechte vorbehalten / all rights reserved © Telegärtner K. Gärtnert GmbH D-71144 Steinbrunn Lerchenstrasse 35 Germany Phone: +49 7157/125-0 Fax: +49 7157/125-5120 www.telegartner.com

Montagecode

E13

assembly code


Assembly Instruction Montageanleitung

Montagecode

E13

assembly code


4.3-10

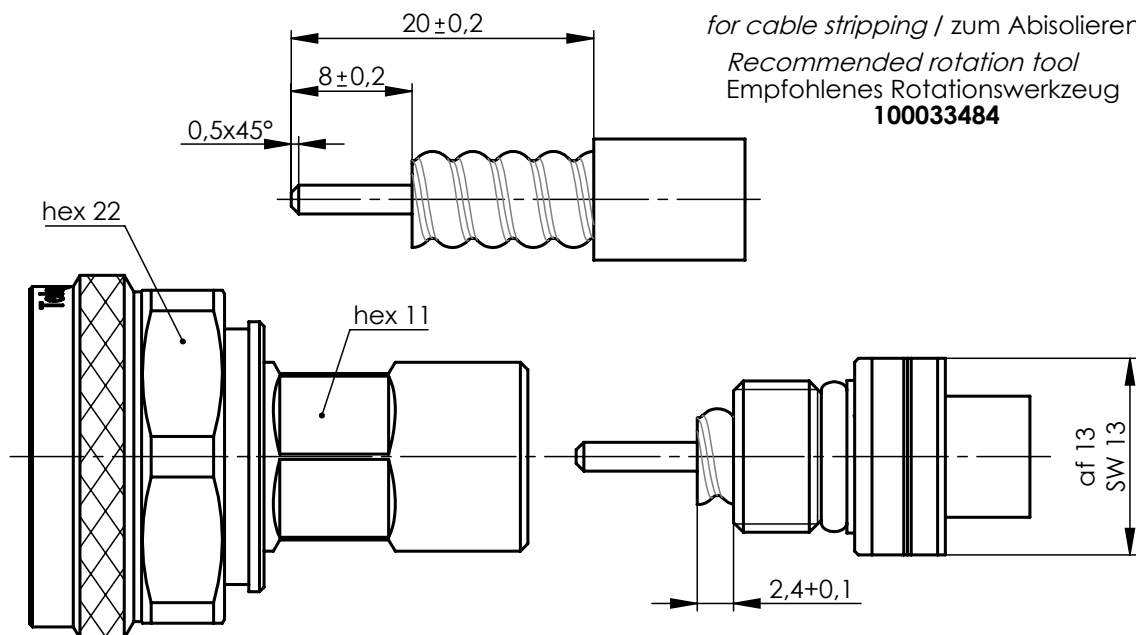


- ② screw on housing, please note lefthand thread
rec. torque 6 Nm
Gehäuse aufschrauben, Linksgewinde beachten
empf. Anzugsmoment 6 Nm

twist cable in ①
Kabel eindrehen


2.2-5

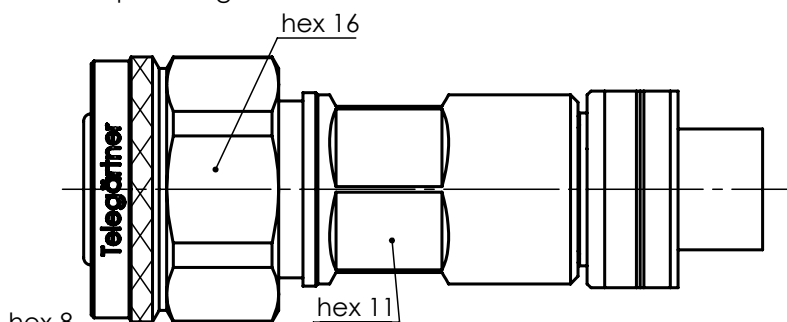

1.5-3.5

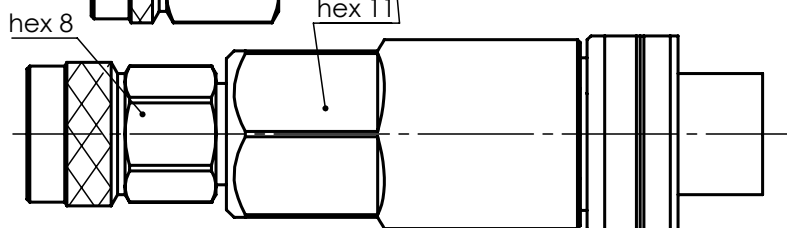

NEX10

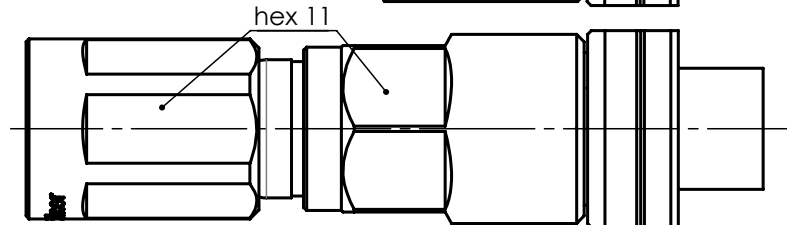

Änd./ rev. index	Änderungs-Nr. / revision code	Datum/ date	Name/ name	gezt./ drawn	Datum/ date	Name/ name	Gewicht/ weight [g]	Oberfläche/ surface [mm²]	Volumen/ volume [mm³]	Werkstoff/ material
				gez./ drawn	30.11.2020	BJ				
				gepr./ appr.	03.12.2020	VM	ca./approx. 130.37	ca./approx.	ca./approx. 20028.01	Oberfläche/ finish